



苏州福龙游乐设备有限公司
SEZHOU FWL LONG AMUSEMENT EQUIPMENT CO.,LTD

地址: 江苏省苏州市工业园区金鸡湖大道1212号
电话: 400-8018-000 销售电话: 18913268027
传真: 0512-42521840 42521841
电子邮箱: 18913268027@163.com 网址: www.fwlong.com
P.O. Box: 325125, Suzhou, China 325125
邮编: 215125 邮编: 215121



目录 Catalog

一、产品简介	2
One, product introduction	2
1.1、技术参数	2
1.1.technical parameters	2
1.2、游戏特色	2
1.2.the game features	2
二、结构与安装说明	3
Two, structure and installation instructions	3
2.1、结构说明	3 ~ 4
2.1.the description of the structure	3 ~ 4
2.2安装说明	4 ~ 9
2.2installation instructions	4 ~ 9
三、注意事项	9
In three, the matters needing attention	9
3.1、安装注意事项	9
3.1.installation notes	9
3.2、操作注意事项	10
3.2.operation note	10
四、随机附件	10
Four, random accessories	10
五、操作说明	11
Five, the operating instructions	11
六、查账与设置	11 ~ 12
Six, audit and setting	11 ~ 12
七、管理	12
Seven, management	12
八、常见故障解决	13 ~ 14
Eight, solve the common faults	13 ~ 14



首先我们要对您使用本公司的产品致以诚挚的谢意,并希望您在使用本产品前,阅读此说明书,以确保使用者的安全和本产品的正常运行。

First of all, we want to use this for your company products caused by the sincere thanks, and wish you before using this product, read the instructions, to ensure the safety of the users and the normal operation of the product.

产品的特性,注意事项,以及一些简易的故障排除方法,在本说明书中皆有概略的说明,所以请妥善保管本说明书,使偶发状况能够有效快速解决。

The characteristics of products, points for attention, and some simple methods of troubleshooting, in this specification are briefly explained, so please save this manual, the incidental can effectively and quickly solve.

一、产品简介 Product Brief

1.1、技术参数

1.1.technical parameters

项目 Project	规格 Specifications
外形尺寸 Size	1480X1400X1400mm (精装版) 1480X1400X1400mm(Hardcover)
总重量 The total weight	约150kg About150kg
电源 Power Supply	DC24V
额定功率 Rated power	200W
投入代币规格 The specification of input tokens	直径22mm - 27mm (可调整) The diameter of 22mm - 27mm (adjustable)

1.2、游戏特色

1.2,the game features

1、本产品操作简便,投币即可畅玩。

1. this product is easy to operate, coin can be fun.

2、摇杆操作灵活,简单,方便,可操作摇杆控制机台前、后、左、右、前左、前右、后左和后右八个方向行驶。

2.Rocker flexible operation, simple, convenient, can operate rocker control machine, after the front, left, right, front left, front right, rear left and rear right eight direction.

3、震撼的音响系统和豪华座椅,让顾客更舒适。

3.Audio system shock and luxurious seats, let customers more comfortable.



二、结构与安装说明 Two, structure and installation instructions

2.1 结构说明 2.1. The description of the structure



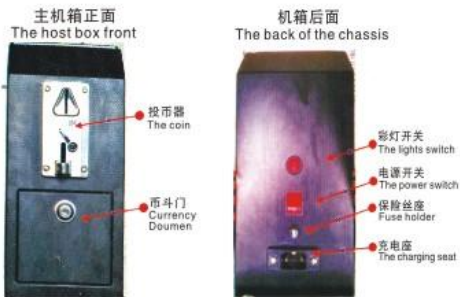


图 3

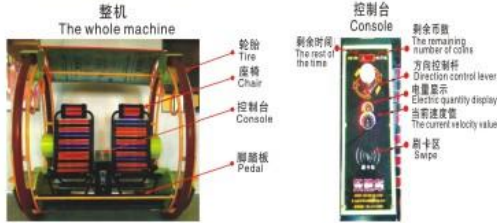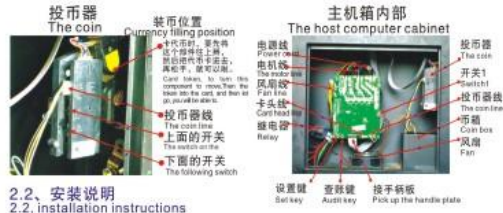

2.2 安装说明 2.2. Installation instructions

机台整体发泡膜后加包纸皮,然后再打木架,因客户要求,本机器可拆装出货,但建议整机发货,客户收到机台后,一定要先仔细查看我们这部分的组装说明,然后按照组装说明的提示,一步一步进行机台组装。
The overall package machine package cardboard and foam film, then dozen wood. Because of customer requirements, the machine can be disassembled and shipment, but suggested that machine delivery. Customers receive the machine, we must first carefully to see this part of the assembly instructions, and then follow the instructions for assembly of the tips, and step by step machine assembly.

2.2.1、首先把乐吧车的两个大轮立起来,然后找到前主杆和后主杆把乐吧车的两个大轮固定好。
2.2.1 First of all the fun car two big wheels are set up, and then find the front main rod and the rear main rod fun car two big wheel fixed.



2.2.2、把踏板处的黑色方管固定在机台前方的踏板处,然后把两个电池槽分别固定在左右两个大轮上,锁好螺丝。
2.2.2 The pedal black square tube is fixed in the front of the machine, and then the two battery slots are respectively fixed on the left and right two big wheel, lock the screw.

图 4



2.2.3、把线槽杆固定在机台后方,锁好螺丝。注意区分线槽杆的方向,左边有黄线和绿线两根电机线,还有彩灯的电源线;右边有黄绿线和蓝线两根电机线,还有喇叭线。

2.2.3 The slot rod is fixed on the rear look screw machine. Pay attention to the distinction between slot rod direction. yellow line and the green line of two motor line on the left, and the lantern power line, yellow green and blue lines of two motor line to the right, and speaker wire.



2.2.4、把大轮的外侧铁圈粘上双面胶,外乐吧车的外圈粘上双面胶,把彩灯的电源接头摆到左轮的接头处,按照说明书上的效果图把LED彩灯摆开,然后把彩灯粘在车架上,用扎带扎好。

2.2.4 Put the wheel lateral hoops Nianshang double-sided adhesive, fun car outside the outer ring Nianshang double-sided adhesive, connect the power adapter lights placed revolver joint, the LED lights were in accordance with the instructions on the map results, then put the lantern sticking on the frame, tied with ribbon.



2.2.5、把彩灯的电源接头连接好,然后用扎带扎好。
2.2.5 Connect the power adapter lights connected, and then use the ribbon tied.

图 5



2.2.6、把电池如下图放在电池槽内,这里一定要注意电池的摆向。
2.2.6 The battery as shown on the battery groove, there must be attention to the battery swing.



2.2.7、安装左边电机,把机架上的黄色线接左边电机的黑色线,机架上的绿色线接左边电机的红色线。

2.2.7 Install the left motor frame, the yellow line is connected with the left motor black line, green line is connected with the frame on the left of the red line motor.

(注意: a、接电机线一定要用高温烙铁把电机线接牢固,否则会出现接触不良的现象。b、接好电机线后,一定要用胶布把电机线的接头处包好,防止出现短路现象。)

(Note: A, connected to a motor line must use high temperature soldering iron to motor line is connected firmly, otherwise it will appear the phenomenon of bad contact. B, connect the motor line, must use electrical tape joint motor line package is good, to prevent short circuit phenomenon.)



图 6

2.2.8、安装右边电机，把机架上的黄绿色线接右边电机的黑色线，机架上的蓝色线接左边电机的红色线。

2.2.8 Install the right motor, the yellow and green lines on the frame connected with the right motor black line, the blue line is connected with the frame on the left of the red line motor.



2.2.9、电源线如图所示接在电池上，下面的左边的图为左边电池的接线，右边的图为右边电池的接线。

2.2.9 Power line as shown on the battery terminal connection, following the graph on the left for the left cell, wiring the figure on the right for the right battery.



2.2.10、把音响固定在右轮上,如左图所示,把机架上所有的线都用扎带扎好,然后用剪刀把扎好的扎带的多余部分剪掉,如右图所示。

2.2.10 The sound is fixed in the right wheel, as illustrated on the left, the frame all the lines with a tie tied, and then use the scissors to cut off excess tied tie belt, as shown on the right.



图 13

2.2.11、把脚踏板用自攻螺丝固定在乐吧车前方的铁管上。

2.2.11 The foot pedal for self tapping screw pipe is fixed on the car in front of the music.



2.2.12、把左右轮的机壳固定好，然后用螺丝锁好。

2.2.12 The casing around the wheel is fixed, and then use the screw lock.



2.2.13、把雨棚用螺丝环安装好

2.2.13 The canopy installed screw ring



2.2.14、把主机用螺丝安装好后把线接好

2.2.14 The host with screws after installation to connect the wire



图 14

2.2.15、关闭主机上的主开关，然后把主机线和机架线连接起来把座椅用螺丝安装好。

2.2.15 Turn off the main switch on the host, then the host line and frame lines connecting the seat installed by screws.



2.2.16、把座椅用螺丝安装好，开机测试机台。

2.2.16 The seat by screws installed, start the test machine.



三、注意事项

The matters needing attention

3.1、安装注意事项

3.1.1 Installation notes

1. 此机台适合在室内和户外使用。
2. 不可随意拆卸和组装机台。
3. 给机台充电时必须正确连接电源插座。
4. 机台须在比较平坦的地面上行驶，不可以行驶在马路上。
5. 不可将机台放置在高温或易产生火花的设备附近。
6. 机台上不可放置杂物。
7. 不可把机台内的电路部分长期暴露在外面。

1. This machine is suitable for use in indoor and outdoor.
2. Not optional disassembly and assembly machine.
3. Give the machine must be connected the correct charging power supply socket
4. The machine must be run on relatively flat ground, not on the road.
5. May not be placed in the machine easy to produce the spark or high temperature near the equipment.
6. The machine can not be placed debris.
7. Do not put the circuit part inside the outside long exposure machine

图 15

3.2、操作注意事项

3.2.1 Operation note

1. 在接通电源前须先检查电源插头和电源线是否完好，检查电压是否适合本机要求。
2. 电源电压必须根据所要求电压使用。
3. 进行维护和检修时一定要将电源断开。
4. 非专业人员不得随意检修本机控制装置。
5. 当替换部件时请选用合适的配件。
6. 当拔出电源线时，应抓住插头拔出，不能抓住电线拔出。
7. 不能用湿手电插拔插头，不能用力拉伸，扭曲电源线。
8. 当电量指示处的八个灯只亮两个红灯时，说明此时机台电量不足，请及时充电，当电量指示处只亮一个红灯，并且数码管闪烁说明机台已严重缺电，此时机台已不可行驶，请推行机台到充电处充电。

1. must first check the power plug and a power line is intact in before turning on power, to check whether the voltage for this machine.
2. the supply voltage must be based on the required voltage use.
3. maintain and repair must be power off.
4. non professional personnel shall not repair the machine control device.
5. when the replacement parts when you choose the right accessories.
6. when pulling out the power line, should grasp and pull the plug, not catch the wire pull.
7. can not use wet flashlight plug plug, can not be forced to stretch, twist the cord.
8. when the eight lamp battery indicator light at only two red lights, indicating that the machine power is insufficient, please charge it in time when the battery indicator light, only a red light, and the digital tube twinkle that machine has serious power shortage, this machine has not run, please implement machine to charge charge.

四、随机附件：

Random accessories:

名称 Name	数量 Number	放置位置 Position	备注 Remarks
使用说明书 An instruction manual	1本 A Book	充电器盒内 The charger box	A5 A five
合格证 Certificate	1张 A piece of	充电器盒内 The charger box	
钥匙 Key	乐吧车专用锁1把 Le bar car special lock up 1	充电器盒内 The charger box	
充电器(24) Charger (twenty-four)	1台 A able	充电器盒内 The charger box	
代币 Token	30枚 Thirty gold	充电器盒内 The charger box	投币型标配 The coin type standard
或IC卡 Or IC card	1张 A piece of	充电器盒内 The charger box	刷卡型标配 The credit card standard
或遥控器 Or the remote control	1个 One	充电器盒内 The charger box	遥控型标配 Remote control type standard

图 16

五、操作说明
Operating instructions

- 1、先在指定位置投入代币,或者刷卡,或者遥控,最多可以投入99枚代币;
- 2、操作方向遥控控制乐吧车畅游。

六、查账与设置
Audit and setting

查账与设置通过按查账键和设置键来实现。按查账键表示翻页,按设置键表示修改或确定,所有数据都是通过主机箱上面的六位数码管查看,数码管显示最前面两项为客户编号项,从第三项开始,数码管的最左边第一位显示1到H的数字(数字旁边有一个小数点),这个数字就表示查账设置的序号,即第1到H项,数码管显示的数字对照下图查阅。

Audit and audit settings by pressing the keys and set key to realize, said flip according to audit key, press the set button to modify or determine that, all the data are viewed by six digital tube mainframe box above, digital tube display the front two items for the customer number, starting from third, the digital tube to the left first show of 1 to H digital (a decimal numbers next to the digital means audit), set the serial number, which is the first of 1 to H. The digital display of the digital control chart review.



- 在开机状态下按下查账键,显示客户编码 1 xxxx
- 再按下查账键,显示客户编码 2 xxxx
- 再按下查账键,显示总投币数高位 3 xxxx
- 再按下查账键,显示总投币数低位 4 xxxx
- 再按下查账键,显示当前投币数高位 5 xxxx
- 再按下查账键,显示当前投币数低位 6 xxxx
- 再按下查账键,显示当前剩余时间 7 xxxx (分钟)
- 再按下查账键,显示娱乐时间/币 8 xxxx
- 这时可以按设置键修改。。。。
- 再按下查账键,显示交班币数 9 xxxx
- 这是按下设置键可以清楚交班币数
- 再按下查账键,显示 888888 结束查账,自动跳回正常状态



Press the audit key in the boot state, the client code 1 XXXX display
Then press the button to display the customer audit, encoding 2 XXXX
Then press the audit key, shows the total number of coins high of 3 XXXX
Then press the audit key, shows the total number of coins of low 4 XXXX
Then press the audit key, display the current number of coins high of 5 XXXX
Then press the audit key, display the current number of coins of low 6 XXXX
Then press the button to display the current audit, the remaining time of 7 xxxx (min)
Then press the audit key, show entertainment time / a coin of 8 XXXX
Then you can press the set button to modify the....
Then press the audit key, display shift number of coins of 9 XXXX
Then press the button to display the 888888 end of audit, audit, automatically jump back to a normal state

七、管理:
management:

机器显示 ----- 表示要进行管理(公司台),
此时按下查账键,显示客户编码 1 xxxx
再按下查账键,显示客户编码 2 xxxx
再按下查账键,显示总投币数高位 3 xxxx
再按下查账键,显示总投币数低位 4 xxxx
再按下查账键,显示当前投币数高位 5 xxxx
再按下查账键,显示当前投币数低位 6 xxxx
再按下查账键,显示特别码 7 xxxx
把这7串数据报给管理员,得到6位延时码
再按下查账键显示 A X
按设置键调整数字为延时码的首位
再按下查账键显示 B X
按设置键调整数字为延时码的第2位。。。。。
输完6位延时码后再按下查账键,显示 888888 表示延时成功,
显示777777 表示延时失败。



八、常见故障解决
Solve the common faults

我们在使用过程中,可能会遇到一些故障,下面就是针对可能会遇到的故障以及对应的解决办法做了一个表格,这样就可以让你以最快的速度把问题给解决。当然你们看了这个表格还是不能够解决问题,请及时打电话给我们的售后,他们会尽快帮你把问题给解决以免耽误你的经营。

We use the process, may encounter some fault, the following is for may encounter failure and the corresponding solutions for a table, this will give you the fastest speed to the problem to solve. Of course, you see this form or not able to solve the problem, please call our customer service, they will help you as soon as possible to solve the problem so as not to delay your business.

序号 Serial Number	问题 The problem	原因 Reason	解决办法 The solution
1	显示屏无币数显示 The display shows no coin bars	需要管理账 The need for management.	按照说明书的第七部分操作 In accordance with the instructions of the seventh part operation
2	关机重启时间不为0 After the restart time of shutdown is not 0.	设置成了带记忆功能 Set to with memory function	把查账设置的D项设置成0 The audit settings D item set to 0
3	显示屏不亮 Display does not light	1、主板上蓝灯亮 1.The motherboard blue light	a. 接线松 The replacement of cable b. 手柄板坏 Replace the handle version
		C、主板坏 The replacement motherboard	更换主板 Replace the motherboard
		2、主板上蓝灯不亮 2.The motherboard blue light does not shine	a. 继电器坏 Replace the relay b. 电源开关坏 Replace the power switch c. 机箱内线松了 The line drawing of it plugged in.
4	时间越开越多 The more open the more time	投币器的两个拨动开关设置的不 The two pull coin dynamic switch settings wrong	把投币器的两个拨动开关,上面的拨到中间,下面的拨到中间。 The two pulled the coin operated switch, pull to the top of the above, the following pull intermediate



5	打开电源开关,没有任何反应,音筒不响,彩灯不亮,显示屏不亮 Turn on the power switch, will find any reaction, sound does not ring, the lights do not light, the display does not light	1、继电器坏 1.Relay bad	更换继电器 Replace the relay
		2、电源开关坏 2.The power switch is bad	更换电源开关 Replace the power switch
		3、机箱内线松了 3.The chassis inside loose	把线拔了再重新插上去 The line drawing of it plugged in
6	投不进币 Do not cast into coins	1、风扇转动 The rotation of the fan	a. 查账设置E项不为0把查账设置的E项设置为0 The E setting audit settings 0 b. 投币器坏更换投币器 The coin bad replace coin
		2、风扇不转 The fan does not turn	主板坏 Bad motherboard 更换主板 The replacement motherboard
7	显示屏只显示币数不显示时间 Screen display only the number of coins do not display time	查账设置F为0,不显示时间 Audit F set to 0, do not show time	把查账设置的F项设置为1 The F setting audit settings 1
8	投币后,币数增加,时间不加 After the coin, the coin number increases, the time without	查账设置9项不为1,游玩一次的币数大于1 Audit setting 9 not 1, that is, play a few coins at a time of greater than 1	把查账设置的9项设置为1 The 9 set of audit settings 1
9	充电时充电指示不闪烁 When charging, charging indicator does not flicker	1、电池已充满电 1.The battery is full of electricity	把电池充满了,等电池的电能得差不多了再充 The battery is fully charged, the battery almost a re-charge
		2、电池处的螺丝松了 2.Battery screws	把电池处的螺丝拧紧 Tighten the screw battery at
		3、电池过放电压过低 3.Overvoltage discharge of the battery, the voltage is too low	把电池拆下,一个不一个充 The battery is removed, a full
10	摇杆方向不正确 Rocking rod when the direction is not correct	1、主板上6根主线连接不正确 1.The motherboard 6 masterstroke is not connected properly	对照说明书的结构图部分的结构图接主板 Manual control structure part of the picture, the main line is connected correctly
		2、电机处的接线不对 2.At the motor connection is wrong	打电话给售后,让他教你接线 Call the customer service, and let him teach you line

